

## CONGRATULATIONS!

Introducing the Contact-TT, the world's first two-way system control keypad, with color touch screen, that lets you **See and Control** your iPod®, XM® Satellite Radio, Sirius® Satellite Radio, HD Radio™ and AM/FM tuner from any room in your home. You'll be amazed at how easy it is to enjoy your favorite program material. Niles manufactures the industry's most complete line of custom installation components and accessories for audio/video systems. To see the complete Niles product assortment, visit us on the Internet at [www.nilesaudio.com](http://www.nilesaudio.com).

### KEY FEATURES

- **"One Touch to Music"** via 8 custom-labeled, Master Keys
- **High resolution 3.5" backlit color touch screen** displays iPod, XM, HD Radio, Sirius and AM/FM information (Station name/number, Artist, Album, Song and Menu's)
- **7 Backlit hard keys** provide convenient access to frequently used system controls (Volume Up & Down, Mute, Next & Previous track/station, System Settings and Off)
- **Alphanumeric keys** allow direct access to Artists, Albums, Songs and Playlists when using an IM-iPod card. Navigating your iPod has never been easier.
- **20 Favorite Stations** list for XM, Sirius, AM/FM, HD Radio, Cable and Sat tuners
- **Party Mode** turns on all your favorite party zones, to the same music, with a simple Press and Hold of any Master Key
- **Global Off** turns off the entire system from anywhere in your home
- **Treble, Bass and Balance** adjustments for every zone
- **Default Turn On Volume** setting for every zone
- **Sleep Timer** for every zone
- **Alarm Clock** for every zone
- **Page and Doorbell** can play through the speakers in any zone

## CUSTOMER SERVICE AND TECHNICAL SUPPORT

BY PHONE (IN USA)
<b>1-800-BUY-HIFI (289-4434)</b>
BY PHONE (OUTSIDE USA)
<b>1-305-238-4373</b>
CUSTOMER SERVICE HOURS
<b>8:00 AM to 5:30 PM ET</b>
TECHNICAL SUPPORT HOURS
<b>8:00 AM to 7:00 PM ET</b>
ON THE WEB
<b><a href="http://www.nilesaudio.com">www.nilesaudio.com</a></b>
EMAIL TECHNICAL SUPPORT
<b><a href="mailto:techsupport@nilesaudio.com">techsupport@nilesaudio.com</a></b>
EMAIL FOR PRODUCT SUGGESTIONS
<b><a href="mailto:productsuggestions@nilesaudio.com">productsuggestions@nilesaudio.com</a></b>

©2007 Niles Audio Corporation 12331 S.W. 130 Street, Miami, FL 33186. All rights reserved. Niles, the Niles logos, IntelliControl, and IntelliFile are registered trademarks of Niles Audio Corporation. All other trademarks are the property of their respective owners. Niles reserves the right to change specifications, descriptions and prices without notice. The technical and other information contained herein is not intended to set forth all technical and other specifications. Designed and engineered in the USA. DS00571A

ENGINEERED BY  NILES®

**IntelliControl<sup>®</sup>ICS**  
INTEGRATED CONTROL SOLUTIONS


USER GUIDE

# CONTACT-TT

TABLE TOP SYSTEM CONTROL KEYPAD  
WITH COLOR TOUCH SCREEN

ENGINEERED BY  NILES®

## CONTACT-TT TABLE TOP SYSTEM CONTROL KEYPAD

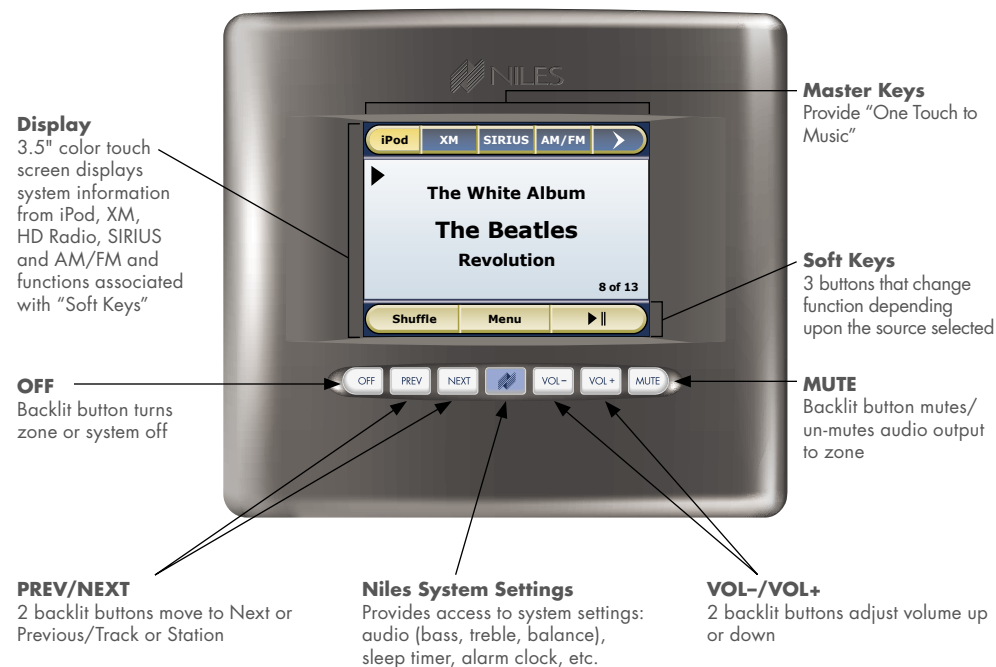

## USING YOUR CONTACT-TT TABLE TOP KEYPAD

**TURNING ON THE SYSTEM**

Press any of the 8 custom-labeled **Master Keys** and music begins playing.

**PARTY MODE**

Press and hold any of the 8 **Master Keys** for 2 seconds, all your favorite zones enabled for Party Mode turn on to the same source.

**SETTING A FAVORITE STATION (XM, SIRIUS, HD RADIO OR AM/FM)**

Tune to the station you would like to add to your favorites list. Touch the **Soft Key** labeled [**Favorites**].<sup>1</sup> A list of your favorite stations appears. Scroll to the end of the list and select [**Add To Favorites**]. 20 Favorites stations can be stored for each tuner.

**REPLACING A FAVORITE STATION.**

Tune to the station you would like to add to your favorites list. Touch the **Soft Key** labeled [**Favorites**]. Locate the favorite you would like to replace. Press and hold the favorite for 2 seconds. A new screen appears, [**Replace**] is highlighted. Select [**Replace**], your tuned station replaces the existing favorite from the list.

**DELETING A FAVORITE STATION**

Touch the **Soft Key** labeled [**Favorites**]. Scroll to the favorite you would like to delete. Press and hold the favorite for 2 seconds. A new screen appears, select [**Delete**]. The favorite is deleted from the list.

**ALPHABETIC SEARCH ON YOUR IPOD**

Press the **Soft Key** labeled [**Menu**], select Artists. Touch the **Soft Key** labeled [**ABC's**]. Touch the **Soft Key** labeled [**C**] for a list of Artists starting with the letter "C".

**TURNING OFF THE ZONE YOU'RE CONTROLLING**

Press the **OFF Key** to turn off the zone you are controlling

**TURNING OFF ALL ZONES**

Press and hold the **OFF Key** for 2 seconds to turn off all zones.

## USING YOUR CONTACT-TT TABLE TOP KEYPAD

**SETTING TREBLE, BASS AND BALANCE**

Press the **Niles System Settings Key**, a list of settings appears. Select [**Audio Settings**]. Touch [+] and [-] to increase or decrease the Treble, Bass and Balance

**SETTING TURN ON VOLUME**

Press the **Niles System Settings Key** and select [**Turn On Volume**]. Select [**Last Used Volume**] or [**Default Turn On Volume**]. Touch [+] and [-] to set the Default Turn On Volume level.

**SETTING THE CLOCK**

Press the **Niles System Settings Key** and select [**Clock Setting**]. Press and hold the **Soft Key** below Hours, Minutes and AM/PM to set the time.

**SETTING THE SLEEP TIMER**

Press the **Niles System Settings Key** and select [**Sleep Timer**]. Touch the left and right arrow keys to turn the sleep timer on and choose [**This Zone**] or [**All Zones**]. Touch [+] and [-] to set the Sleep Timer on time.

**SETTING THE ALARM CLOCK**

Press the **Niles System Settings Key** and select [**Alarm Clock**]. Touch the left and right arrow keys to turn the alarm clock on and choose the source you would like to wake up to. Touch [+] and [-] to set the Alarm on time.

**SETTING THE PAGE/DOORBELL**

Press the **Niles System Settings Key** and select [**Paging/Doorbell**]. Touch the left and right arrow keys to choose [**Always in this Zone**], [**Only if the Zone is On**] or [**Never in this Zone**]. Touch [+] and [-] to set the Page/Doorbell volume level.

**CLEANING THE TOUCH SCREEN**

Press the **Niles System Settings Key** and select [**Clean Me Screen**]. Clean the screen using a soft cloth and a mild dish detergent. Press the **Niles System Settings Key** again when complete.

<sup>1</sup> [ ] Brackets correspond to LCD display selection or function.