

CONGRATULATIONS!

Introducing the Display, the world's first two-way system control keypad, with LCD display, that lets you **See and Control** your iPod®, XM® Satellite Radio, Sirius® Satellite Radio and AM/FM tuner, right in the palm of your hand, from anywhere in your home. Niles manufactures the industry's most complete line of custom installation components and accessories for audio/video systems. To see the complete Niles product assortment, visit us on the Internet at www.nilesaudio.com.

KEY FEATURES

- **"One Touch to Music"** via 8 custom-labeled, backlit, Master Keys
- **High resolution 2" backlit LCD** displays iPod, XM, Sirius and AM/FM information (Station name/number, artist, album, song and menus)
- **Alphanumeric keys** allow direct access to artists, albums, songs and playlists when using an IM-iPOD card. Navigating your iPod has never been easier
- **20 Favorite Stations** list for XM, Sirius, AM/FM, cable and satellite tuners
- **Party Mode** turns on all your favorite party zones, to the same music, with a simple press and hold of any master key
- **Global Off** turns off the entire system from anywhere in your home
- **Treble, Bass and Balance** adjustments for every zone
- **Default Turn On Volume** setting for every zone
- **Sleep Timer** for every zone
- **Alarm Clock** for every zone
- **Page and Doorbell** can play through the speakers in any zone
- **Electroluminescent backlighting** for all keys

CUSTOMER SERVICE AND TECHNICAL SUPPORT

BY PHONE (IN USA)

1-800-BUY-HIFI (289-4434)

BY PHONE (OUTSIDE USA)

1-305-238-4373

CUSTOMER SERVICE HOURS

8:00 AM to 5:30 PM ET

TECHNICAL SUPPORT HOURS

8:00 AM to 7:00 PM ET

ON THE WEB

www.nilesaudio.com

EMAIL TECHNICAL SUPPORT

techsupport@nilesaudio.com

EMAIL FOR PRODUCT SUGGESTIONS

productsuggestions@nilesaudio.com

©2006 Niles Audio Corporation 12331 S.W. 130 Street, Miami, FL 33186. All rights reserved. Niles, the Niles logos, and IntelliControl are registered trademarks of Niles Audio Corporation. All other trademarks are the property of their respective owners. Niles reserves the right to change specifications, descriptions and prices without notice. The technical and other information contained herein is not intended to set forth all technical and other specifications. Designed and engineered in the USA. DS00431B

ENGINEERED BY  NILES®

IntelliControl[®]ICS
INTEGRATED CONTROL SOLUTIONS

USER GUIDE

DISPLAY

SYSTEM CONTROL KEYPAD
WITH LCD DISPLAY

ENGINEERED BY  NILES®

DISPLAY SYSTEM CONTROL KEYPAD

Display

Backlit LCD displays system information from iPod, XM, SIRIUS and AM/FM and functions associated with "Soft Keys"

Soft Keys

3 backlit buttons that change function depending upon the source selected

Cursor and SELECT Keys

5 backlit buttons provide navigation of menus, playlists and favorites

OFF

Backlit button turns zone or system off

PREV/NEXT


2 backlit buttons move to Next or Previous/Track or Channel

Niles System Settings

Provide access to system settings: audio (bass, treble, balance), sleep timer, alarm clock, etc.

VOL-/VOL+

2 backlit buttons adjust volume up or down

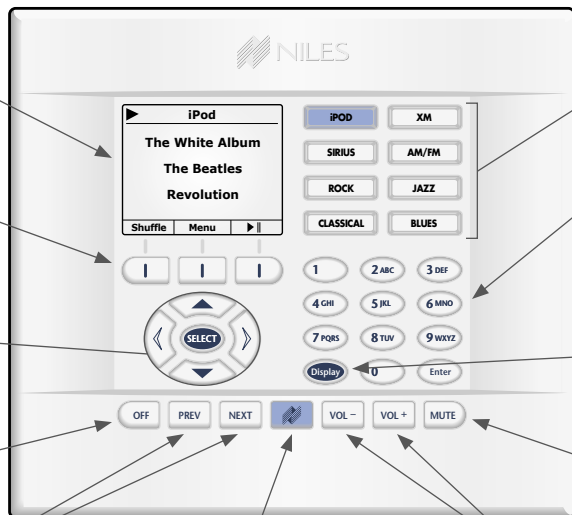

Master Keys

8 backlit buttons provide "One Touch to Music"

Alphanumeric Keys

Provide direct access tuning, numeric selection of track and alphabetic search for iPod

Display Key

Turns on the LCD screen and key backlighting

MUTE

Backlit button mutes/un-mutes audio output to zone

USING YOUR DISPLAY KEYPAD

TURNING ON THE SYSTEM

Press any of the eight custom-labeled **Master Keys** and music begins playing.

SELECTING A SOURCE

Simply press the **Master Key** that corresponds to the source you wish to control.

PARTY MODE

Press and hold any of the eight **Master Keys** for 2 seconds. All your favorite zones enabled for Party Mode turn on to the same source.

SETTING A FAVORITE STATION (XM, SIRIUS OR AM/FM)

Tune to the station you would like to add to your favorites list. Press the **Soft Key** labeled [**Favs**].¹ A list of your favorite stations appear. Scroll to the end of the list and select [**Add to Favorites**]. 20 Favorite stations can be stored for each tuner.

REPLACING A FAVORITE STATION

Tune to the station you would like to add to your favorites list. Press the **Soft Key** labeled [**Favs**]. Scroll to the favorite you would like to replace. Press and hold the **SELECT Key** for 2 seconds. A new screen appears, [**Replace**] is highlighted. Select [**Replace**]. Your tuned station replaces the existing favorite from the list.

DELETING A FAVORITE STATION

Press the **Soft Key** labeled [**Favs**]. Scroll to the favorite you would like to delete. Press and hold the **SELECT Key** for 2 seconds. A new screen appears, select [**Delete**]. The favorite is deleted from the list.

ALPHABETIC SEARCH ON YOUR IPOD

Press the **Soft Key** labeled [**Menu**], select [**Artists**]. Press the **Alphanumeric Key** that represents the letter corresponding to the name of the artist (i.e., press "2 ABC" key three times for a list of Artists starting with the letter "C").

USING YOUR DISPLAY KEYPAD

TURNING OFF THE ZONE YOU'RE CONTROLLING

Press the **OFF Key** to turn off the zone you're controlling.

TURNING OFF ALL ZONES

Press and hold the **OFF Key** for 2 seconds to turn off all zones.

SETTING TREBLE, BASS AND BALANCE

Press the **Niles System Settings Key**, a list of settings appear. Select [**Audio Settings**]. Use the left or right **Cursor Keys** to change the level. Use the up or down **Cursor Keys** to move from Treble to Bass to Balance.

SETTING TURN ON VOLUME

Press the **Niles System Settings Key** and select [**Turn On Volume**]. Select [**Last Used Volume**] or [**Default Turn On Volume**]. Use the left or right **Cursor Keys** to set the default Turn On Level.

SETTING THE CLOCK

Press the **Niles System Settings Key** and select [**Clock Setting**]. Use the left or right **Cursor Keys** to change the time. Use the up or down **Cursor Keys** to move from Hours to Minutes to AM/PM.

SETTING THE SLEEP TIMER

Press the **Niles System Settings Key** and select [**Sleep Timer**]. Use the left or right **Cursor Keys** to turn the sleep timer on, set the time and select [**This Zone**] or [**All Zones**].

SETTING THE ALARM CLOCK

Press the **Niles System Settings Key** and select [**Alarm Clock**]. Use the left or right **Cursor Keys** to turn the alarm clock on, set the wake up time and choose the source you would like to wake up to.

SETTING THE PAGE/DOORBELL

Press the **Niles System Settings Key** and select [**Paging/Doorbell**]. Use the left or right **Cursor Keys** to select [**Always In This Zone**], [**Only If Zone Is On**] or [**Never In This Zone**].

¹ [] Brackets correspond to LCD display selection or function.