

IntelliControl<sup>®</sup>ICS  
INTEGRATED CONTROL SOLUTIONS

USER GUIDE

---

iREMOTE<sup>®</sup> TS

---

2-WAY WIRELESS RF/IR  
SYSTEM CONTROL REMOTE  
WITH COLOR TOUCHSCREEN

ENGINEERED BY



# CONGRATULATIONS!

Introducing the iRemote®TS, the world's first two-way, color touchscreen system remote that controls both a home theater system and an IntelliControl® ICS distributed audio/video system from a single, elegant user interface. The iRemoteTS lets you see and control your iPod®, music stored on a server, XM® and SIRIUS® Satellite Radio, AM/FM, and HD Radio™ from any room of your house. Niles manufactures the industry's most complete line of custom installation components and accessories for audio/video systems. To see the complete line of Niles' product assortment, visit us on the Internet at [www.nilesaudio.com](http://www.nilesaudio.com).

## TABLE OF CONTENTS

<b>Key Features</b> .....	2
<b>Product Overview</b> .....	3
<b>Operating the iRemoteTS in the Theater Mode</b> .....	4
<b>Operating the iRemoteTS in the House Mode</b> .....	6
<b>Source Settings in the House Mode</b> .....	8
<b>System Settings in the House Mode</b> .....	9

## KEY FEATURES

- **House and Theater Mode Keys** provide one-touch access to your MultiZone distributed audio/video system and to your home theater systems from a single wireless remote control
- **Controls Your MultiZone Distributed Audio/Video System** from anywhere in your home
- **Controls Your Home Theater** from an elegant, easy to use interface
- **Custom Labeled Master Keys** provide One Touch To Entertainment® and eliminate having to remember which key does what
- **Backlit Hard Keys** provide easy access to the most frequently used system controls
- **High-Resolution Color Touchscreen** displays customized control screens for your distributed audio/video system and home theater
- **Displays Metadata Information** from your MultiZone distributed audio/video system such as artist, album, song, and menus when available
- **Preset Menu Screens** are designed to be easy to see and intuitive to use
- **Desktop Charging Cradle** provides convenient recharging of the built-in rechargeable battery

## PRODUCT OVERVIEW

**Touchscreen**

A high-resolution color touchscreen that displays the home theater and IntelliControl ICS MultiZone system control screens

**IR Flasher**

Transmits infrared (IR) codes to your home theater sources

**Function Keys**

Control commonly used functions of the home theater and MultiZone system

**Theater Key**

Selects home theater control

**Niles Logo Key**

Used to select the home theater or House zone you want to control, plus various system and source settings

**System Off**

Turns off the home theater or any zone in the MultiZone system

**House Key**


Selects MultiZone system control



**12V DC Power Supply**

**Power Supply Connection**

The supplied charging power supply connects to this barrel connector

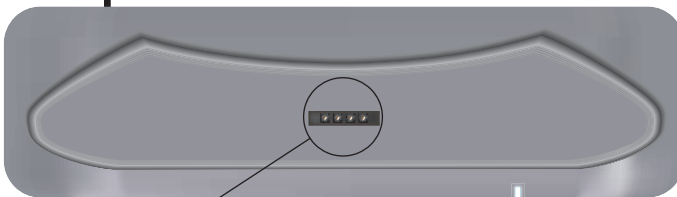

**Charging Base**

**Charging Base Contacts**

Connections that charge the iRemoteTS battery when placed in the charging base



**Charging Indication LED**



Lights up when the iRemoteTS is placed in the charging base and turns off when the battery is fully charged

# OPERATING THE iREMOTE<sup>TS</sup> IN THE THEATER MODE

The iRemoteTS is a combination of two remotes in one. With a press of the **Theater** key, the iRemoteTS controls your home theater. With a press of the **House** key, you can control any zone on your IntelliControl ICS MultiZone system. This user guide will show examples of how to control both your home theater and your MultiZone system, plus how to access and adjust the system menus of the iRemoteTS and the IntelliControl ICS MultiZone system.

## TURNING ON AND CONTROLLING A HOME THEATER SOURCE


- 1) Pick up the iRemoteTS from its charging cradle
- 2) Press the **Theater**  key to display the home theater Master keys on the touchscreen
- 3) Touch the Master key that corresponds to what you would like to play on your home theater (when selected, the Master Key will highlight). For example, if you touch the **[DVD **

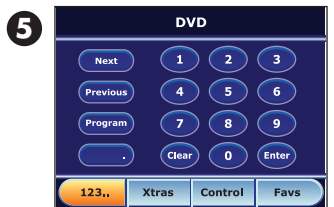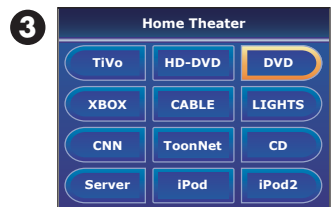

<sup>1</sup>[ ] Brackets correspond to a touchscreen display selection or function.

## OPERATING THE iREMOTE TS IN THE THEATER MODE (CONT'D)

### CHOOSING A NEW HOME THEATER SOURCE

- 1) Press the **Theater**  key to show the home theater **[Master Keys]** on the touchscreen. Any currently selected Master key will be highlighted
- 2) Choose a new source or activity by touching the Master Key labeled for the source or activity you wish to control



 

### TURNING OFF THE HOME THEATER

 
- 1) Press the **System Off**  key to turn off the home theater



# OPERATING THE iREMOTE<sup>TS</sup> IN THE HOUSE MODE

## TURNING ON A SPECIFIC ZONE AND CONTROLLING A SOURCE OF YOUR DISTRIBUTED AUDIO/VIDEO SYSTEM



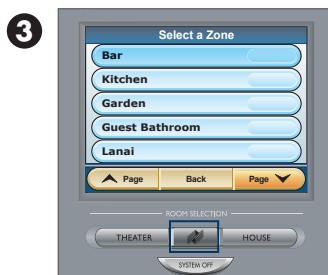- 1) Pick up the iRemoteTS from its charging cradle
- 2) Press the **House**  key. The name of the zone that was last selected will be displayed for a few seconds across the top of the screen. The Master keys for the zone will be displayed. If the selected zone contains metadata (album, song, artist, etc.) it will also be displayed
- 3) To select a zone different from the last selected, press and release the **Niles Logo**  key and the list of available zones will be displayed. Touch **[Page Down Page ▼]** to toggle through the list of all zones. Touch the key labeled with the zone you want to control
- 4) The Master keys for the zone will be displayed. If the selected zone contains metadata (album, song, artist, etc.) it will also be displayed. Select the source you wish to listen to. Touch the **[Arrow ▶]** key to toggle to additional sources. Use the control screens along the bottom for specific control functions



(CONTINUED ON NEXT PAGE)

## OPERATING THE iREMOTE TS IN THE HOUSE MODE (CONT'D)

### TURNING ON THE PARTY MODE

- 1) Press the **House**  key to display the Master keys on the touchscreen
- 2) Touch and hold for three seconds the **[Master Key** ] you would like to play while in the Party Mode. All pre-selected Party Zones will begin playing



### TURNING OFF THE DISTRIBUTED AUDIO/VIDEO ZONE YOU ARE CONTROLLING

- 1) Press the **System Off**  key to turn off the zone you are controlling



### TURNING OFF ALL DISTRIBUTED AUDIO/VIDEO ZONES

 
- 1) Press and hold the **System Off**  key for two seconds to turn off all zones



# SOURCE SETTINGS IN THE HOUSE MODE


## SETTING A FAVORITE STATION (XM, SIRIUS, HD RADIO, ETC.)

- 1) Tune in the station you would like to add to your favorites
- 2) Touch the **[Favorites Favorite]** key along the bottom of the touchscreen. A list of your favorites will appear
- 3) If necessary, touch the **[Page Page]** key to toggle down the list. Touch **[add favorite add favorite]** to add the tuned in station to your favorites. Up to 20 favorite stations can be stored

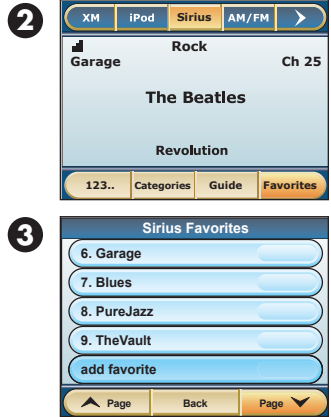

## REPLACING A FAVORITE STATION

 - 1) Tune in the station you would like to add to your favorites
- 2) Touch the **[Favorites Favorite]** key on the touchscreen. Locate the favorite you would like to replace
- 3) Press and hold the favorite for three seconds and then release. A new screen appears. Select **[Replace Replace]**. Your tuned station will replace the existing favorite

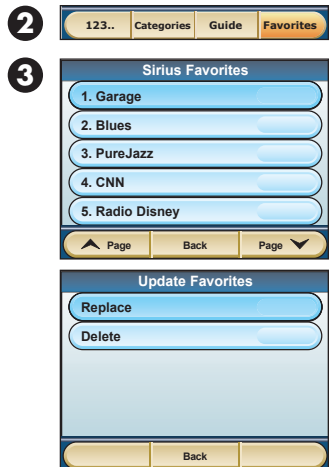

## DELETING A FAVORITE STATION

- 1) Touch the **[Favorites Favorite]** key on the touchscreen. If necessary, scroll down to the favorite you would like to delete
- 2) Press and hold the favorite for three seconds and then release. A new screen appears. Select **[Delete Delete]**. The favorite is deleted from the list




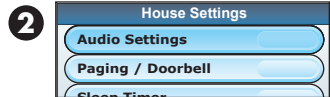
## SYSTEM SETTINGS IN THE HOUSE MODE

## SETTING TREBLE, BASS, AND BALANCE


- 1) Press and hold the **Niles Logo**  key for three seconds. Select [**House Settings** ]



- 2) Select [**Audio Settings** ]. Touch the **[+]** and **[-]** keys to increase or decrease the treble or the bass and to adjust the balance between the right and left loudspeakers



- 3) Touch [**Back** ] to return to the previous screen, or press **House**  to return to the source and zone you were controlling




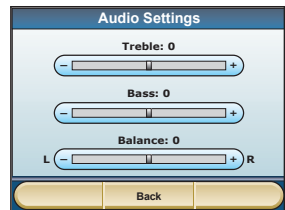


## SETTING THE PAGE/DOORBELL




 
- 1) Press and hold the **Niles Logo**  key for three seconds. Select [**House Settings** ]

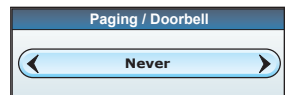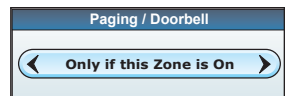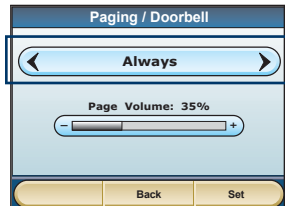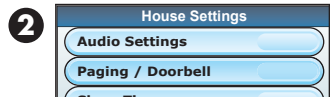


- 2) Select the [**Paging/Doorbell** ] key. Touch the **Arrow**  keys to select [**Always** ], [**Only if this Zone is On** ], or [**Never** ]





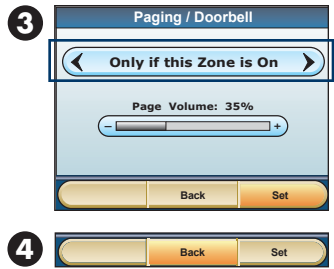

## SYSTEM SETTINGS IN THE HOUSE MODE (CONT'D)

- 3) If you selected [**Only if this Zone is On** , touch the [+ and -] keys to increase or decrease the page/doorbell volume
- 4) When finished, touch the [**Set** ] key
- 5) Touch [**Back** ] to return to the previous screen, or press **House**  to return to the source and zone you were controlling



## SETTING THE SLEEP TIMER

- 1) Press and hold the **Niles Logo**  key for three seconds. Select [**House Settings** ]
- 2) Select [**Sleep Timer** ]. Touch the top **Arrow**  keys to select [**Sleep Timer Is Off** ] or [**Sleep Timer Is On** ]
- 3) If you selected [**Sleep Timer Is On** ], touch the **Arrow**  keys on the key below to select [**All Zones** ] or [**This Zone Only** ]
- 4) Touch [**Back** ] to return to the previous screen, or press **House**  to return to the source and zone you were controlling



(CONTINUED ON NEXT PAGE)

# SYSTEM SETTINGS IN THE HOUSE MODE (CONT'D)

## SETTING THE ALARM CLOCK FOR ONE OF THE ZONES



- 1) Press and hold the **Niles Logo**  key for three seconds. Select [**House Settings**




- 2) Select [**Alarm Clock** 


- 3) Touch the **Arrow**  keys to select [**Alarm is Off** 

or [**Alarm is On** 





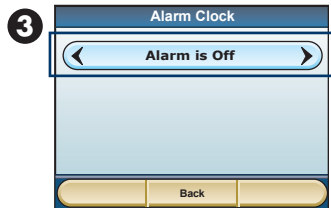

- 4) If you selected [**Alarm is On** ], set the alarm time by touching the oval  keys below the **hours**, **minutes**, and **AM/PM**

 
- 5) Touch the **Arrow**  keys to select the source you want the alarm clock to play

- 6) Touch [**Back** ] to return to the previous screen, or press **House**  to return to the source and zone you were controlling







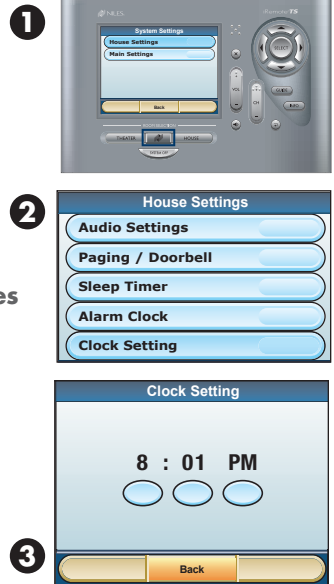





## SETTING THE CLOCK

- 1) Press and hold the **Niles Logo**  key for three seconds. Select [**House Settings** ].
- 2) Select [**Clock Settings** ].
- 3) Touch the oval [  ] keys below the **hours**, **minutes** and **AM/PM** to set the time. Touch [**Back**  ] to return to the previous screen, or press **House**  to return to the source and zone you where controlling



## SETTING THE ZONE'S TURN ON VOLUME





- 1) Press and hold the **Niles Logo**  key for three seconds. Select [**House Settings** ].
- 2) Touch [**Page Down Arrow** ] key to scroll down to the next page
- 3) Select the [**Turn On Volume** ] key. Touch the **Arrow**  keys to select [**Default Turn On Volume** ] or [**Last Used Volume** ].
- 4) If you selected [**Default Turn On Volume** ], touch the [**+**] and [**-**] keys to increase or decrease the turn on volume
- 5) Touch [**Back** ] to return to the previous screen, or press **House**  to return to the source and zone you where controlling





(CONTINUED ON NEXT PAGE)

## SYSTEM SETTINGS IN THE HOUSE MODE (CONT'D)

### CLEANING THE TOUCHSCREEN

- 1) Press and hold the **Niles Logo**  key for three seconds. Select **[Main Settings**  ]
- 2) Select the **[Clean Me Screen**  ]
- 3) Clean the screen with a soft cloth dampened with a mixture of water and mild dish detergent. Never apply any liquid directly to the screen surface. Dry thoroughly with a soft, dry cloth
- 4) Press the **Niles Logo**  key when finished

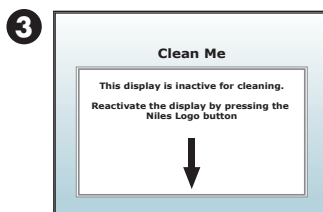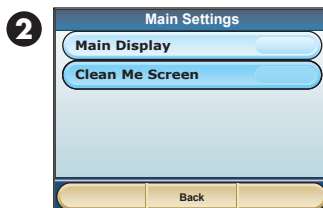

### BATTERY LIFE AND MAINTENANCE

The lithium ion battery is designed to last between 24 and 48 hours depending upon usage. It is also designed to be placed in the charging base whenever not in used. When leaving the iRemoteTS unused for long periods of time (such as when used in a vacation home) it is best to leave the iRemoteTS in its charging base and the charging base plugged in.

# NOTES

## CUSTOMER SERVICE AND TECHNICAL SUPPORT

BY PHONE (IN USA)

**1-800-BUY-HIFI (289-4434)**

BY PHONE (OUTSIDE USA)

**1-305-238-4373**

CUSTOMER SERVICE HOURS

**8:00 AM to 5:30 PM ET**

TECHNICAL SUPPORT HOURS

**8:00 AM to 7:00 PM ET**

ON THE WEB

**[www.nilesaudio.com](http://www.nilesaudio.com)**

EMAIL TECHNICAL SUPPORT

**[techsupport@nilesaudio.com](mailto:techsupport@nilesaudio.com)**

DEALER CONTACT INFORMATION

©2009 Niles Audio Corporation 12331 S.W. 130 Street, Miami, FL 33186. All rights reserved. Niles, the Niles logos, One Touch To Entertainment, IntelliControl, IntelliFile, and iRemote are registered trademarks of Niles Audio Corporation. All other trademarks are the property of their respective owners. Niles reserves the right to change specifications, descriptions and prices without notice. The technical and other information contained herein is not intended to set forth all technical and other specifications. Designed and engineered in the USA. DS00583B

ENGINEERED BY

